

BELAR

FMHD-1

Automatic Delay Correction Software Module



Guide to Operations

©2024

WARRANTY AND FACTORY SERVICE



BELAR ELECTRONICS LABORATORY, INC.

P.O. Box 1299 • COLUMBIA CA 95310 USA
VOICE (610) 687-5550 • FAX (610) 687-2686
www.belar.com • sales@belar.com • sevice@belar.com

1.	Description	1
2.	Initial Setup	2
3.	Validating Software Module	7
4.	Time/Level Align Measurement Screen	8
5.	Time Align Status Screen	9
6.	Time Align Multi-Scan Screen.....	10
7.	Time Align Configuration Screen	11
8.	GatesAir Configuration: UPD HDE-200 and FMXi	12
9.	GatesAir Configuration: TCP FMXi.....	13
10.	Nautel Configuration: Nautel Exporter Plus	14
11.	Omnia Configuration: Omnia.6	15
12.	Omnia Configuration: Omnia7.9	16
13.	Omnia Configuration: Omnia.9 Cross Feed	17
14.	Omnia Configuration: Omnia 11	18
15.	Orban Configuration	19
16.	Wheatstone Configuration	20

1. DESCRIPTION


The **BELAR FMHD-1** automatic delay correction software module allows the monitor to communicate directly with the device containing the diversity delay in the broadcast chain. The communication is accomplished by establishing an IP connection between the devices with the FMHD-1 being the host, and the delay device acting as the client. The diversity delay error is calculated in the FMHD1 and this error information is feedback to the delay device closing the loop and keeping the delay errors in check.

There are three places the diversity delay may be inserted into a broadcast chain to achieve the required delay between the Analog Main FM and HD1 Digital signals. On the analog side the delay can be applied to either the Analog Main Audio channel or the composite baseband signal, on the digital side the HD1 digital signal can be delayed. The total overall diversity delay can all be solely the analog Main Audio or Baseband Composite, or it may be made up of a combination of delays on the Analog and HD1 digital signals.


Currently, there are three types of delay devices which can communicate with the FMHD-1 audio processors, precision delays, and exporters. Audio processors can typically adjust the delay of the Analog Audio and Baseband Composite, some can also adjust the delay on the HD1. Precision delays can be used on either the Main Analog or HD1 signals. Exporters have a delay line with AES input and outputs which can be used to delay the Analog Main or HD1, even thou this delay line was originally designed for the Analog Main the HD1 Main can be looped thru as well. See the examples of some typical broadcast chain setups below.

Examples of Analog Only Delay Correction


Audio Processor with Variable Analog Delay Only

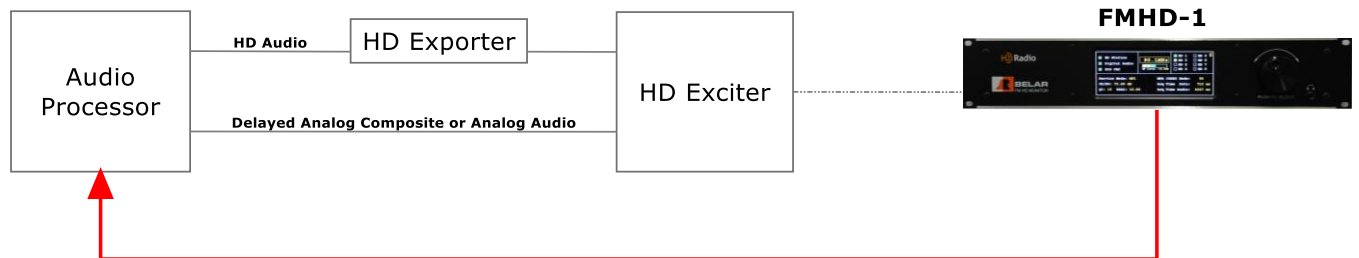

Audio Processor without Delay , Exporter Variable Delay

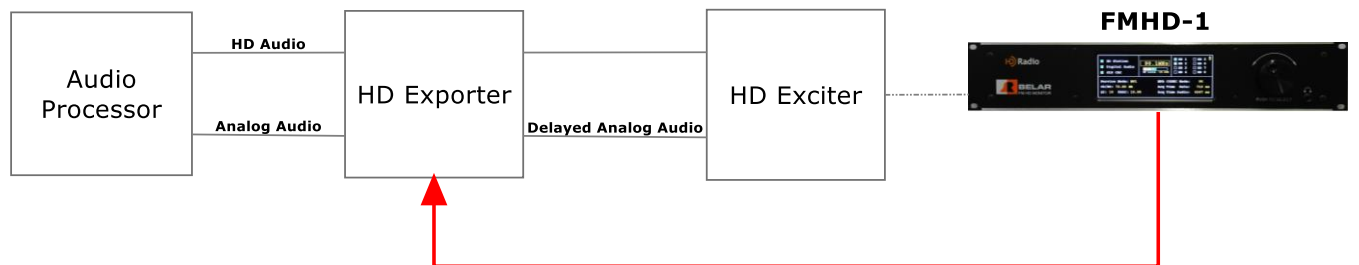


External Precision Variable Analog Delay

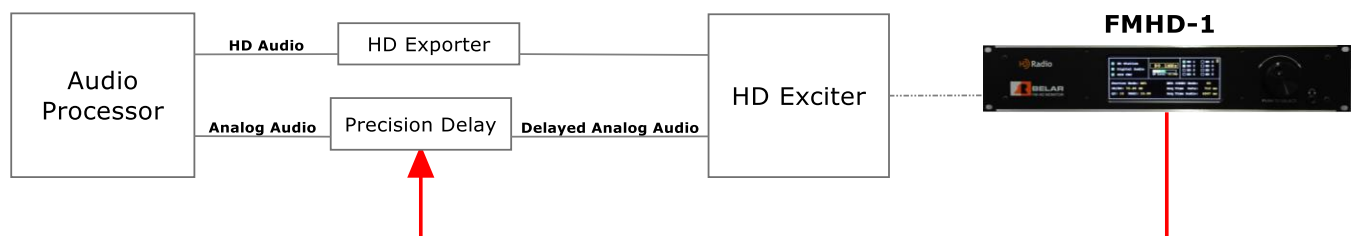


Examples of Fixed Analog Delay with Correction on the HD1 Digital

Audio Processor with Fixed Analog Delay and Variable HD1 Delay

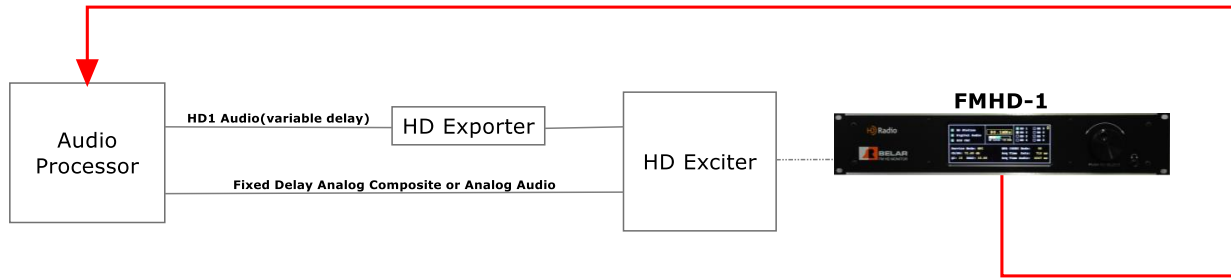

Exporter Variable HD1 Delay, Audio Processor with Fixed Analog Delay

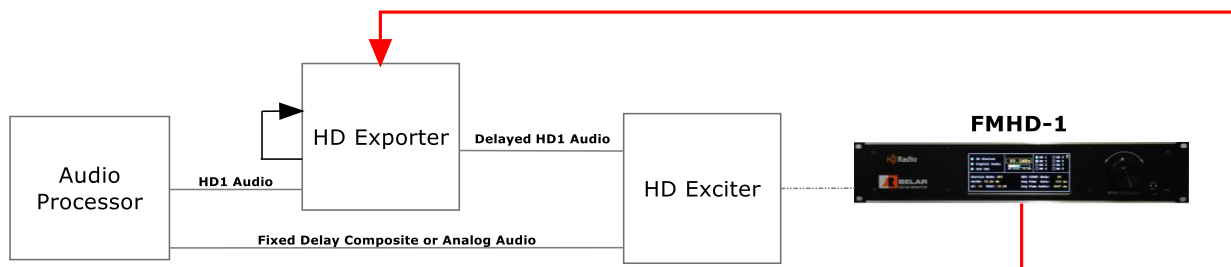

2. INITIAL SETUP

Getting Accurate Correlations between the Analog and HD Audio

In order for the FMHD-1 to reliably calculate the diversity delay error the unit must be able to correlate the Analog and HD audio waveforms. The correlation operates on the time domain samples of the waveforms. It is insensitive to magnitude differences, but very sensitive to phase differences between the waveforms. Therefore, it is extremely important that the Analog and HD Main Audio are processed as identically as possible. This is most easy done by using the same audio processor for both audio signals and selecting the same preset/settings.

Bad correlations between the two audio channels will result in slow diversity delay corrections, out of range errors, and audio polarity errors.

Delay Center Value

The Belar ADC algorithm corrects plus or minus around a delay center, instead of trying to across the whole possible delay range. This allows the correlations to be computed faster resulting in more frequent corrections to keep the diversity delay aligned in real time. The delay center should to set to the nominal or average delay present in the broadcast chain. Because the delay correction can be the total analog delay, or some fraction of the analog or digital delay this delay center value can as small as 500 ms to over 9 seconds. It's important to get the setting correct otherwise the delay corrections can get out of range.

The time window is adjustable trading off the resolution of the calculated delay error for overall delay range. Expanding the delay range also effects the time required to perform the correlation and slows down the application of delay corrections. The sample resolution setting on the Level/Time Align Screen and has a range of 1 to 8 samples. See the table below for the delay window vs sample resolution,

Samples Resolution	Time Window	Correlation Time
1	+/- 350 ms	3 sec
2	+/- 700 ms	
3	+/- 1.050 sec	

4	+/- 1.400 sec
5	+/- 1.750 sec
6	+/- 2.100 sec
7	+/- 2.450 sec
8	+/- 2.800 sec

The Sample Resolution can be set to Auto which will adjust the sample resolution automatically if the delay errors get out of range, and then reduce the sample resolution as the delay comes back in range.

If the diversity delay thru the broadcast chain is unknown, set the Sample Resolution to 8 samples and on the Settings:Outputs popup menu route the L+R Analog and HD1 L+R to the headphone outputs to aid in getting the initial alignment.

Modes of Operation

Most delay devices support three modes of operation, Direct, Manual, and Auto. In Direct mode the delay in the connected device can be set directly from the front panel of the monitor by adjusting the Delay Center value on the configuration screen for the active device. This is useful for initial setup to get the starting value for the Delay Center when the diversity delay is unknown. Manual mode calculates and displays the delay correction, but does not send the corrected value to the delay device unless the button is clicked. Finally, in Auto mode the monitor send corrections automatically at the Rate time interval defined in the delay devices configuration.

For initial setup use Manual mode and check to make sure the system is working correctly by sending corrections manually and observing the time alignment screen. Once the proper operation is confirmed the mode can be changed to Auto.

Active Configuration

There are 6 device configuration screens labeled #1 thru #6., the current active configuration is determined by the active configuration number which is display on the time align status screen. To select a configuration click on the APPLY button on the one of the six configuration screens. When Multi-Scan mode is disabled the unit will use continue to use the selected active configuration until another configuration is applied. When Mutil-Scan mode is enabled the unit will automatically switch load a new configuration based on the settings on the Mutil-Scan Screen.

Assign Tuning Frequency

Using the Multi-Scan screen assign a tuning frequency for each configuration that will be used. The unit will automatically tune to this frequency when the configuration is applied. If the tuning frequency is changed and doesn't match this value a Tuning Freq error will be displayed on the time align status screen.

Multi-Scan

Enabling the Multi-Scan mode allows the FMHD-1 to measure and correct the diversity delay on up to 6 stations. This is accomplished by setting up delay device configurations for device and assigning the stations tuning frequency and time slot duration. When the Multi-Sync time is set to 0 that configuration will be skipped, once a number greater is entered the station will be included automatic scanning.


3. VAILDATING SOFTWARE MODULE

☐ HD Station ☐ Digital Audio ☐ SIS CRC	89.3MHz RF Level 0.0%	Info  BOOT: 5.06 06/17/15 MAIN: 5.06 06/17/15 DSP#1: 1.03 09/10/10 DSP#2: 1.30 05/07/15 DSP#3: 1.40 06/16/11 DSP#4: 1.30 04/25/13 DSP#5: 1.20 04/25/13 MIC#1: 3.50 09/05/12 MIC#2: 4.00 05/08/13 UNIT: FMHD-1 S1 SERIAL#: 450214 OPTION#: 67 74 76 56 VALIDATE
Service Mode: MPA C	Acq T	
CD/NO:	Acq T	
QI: DAAI:	Acq T	

Before the Automatic Delay Correction software module is used it must first be activated. If you have an older unit purchased before January 1st 2105 there is a onetime fee to activate this module. Please contact Belar for pricing and to obtain the validation codes. The codes are unique and tied to the FMHD-1's serial number, once the feature is activated it will remain active for all future software updates.

To validate the software module go to the Settings:Info popup menu and place the cursor on the first code, click on the code and use the rotary encoder to entry the code, click again, and proceed to the next code until they are all set. Once the codes are set, place the cursor on the VALIDATE text and click, the UNIT string should change from FMHD-1 to FMHD-1 S1 is the validation was successful. The codes will be permanently stored in the unit.

4. TIME/LEVEL ALIGN MEASUREMENT SCREEN

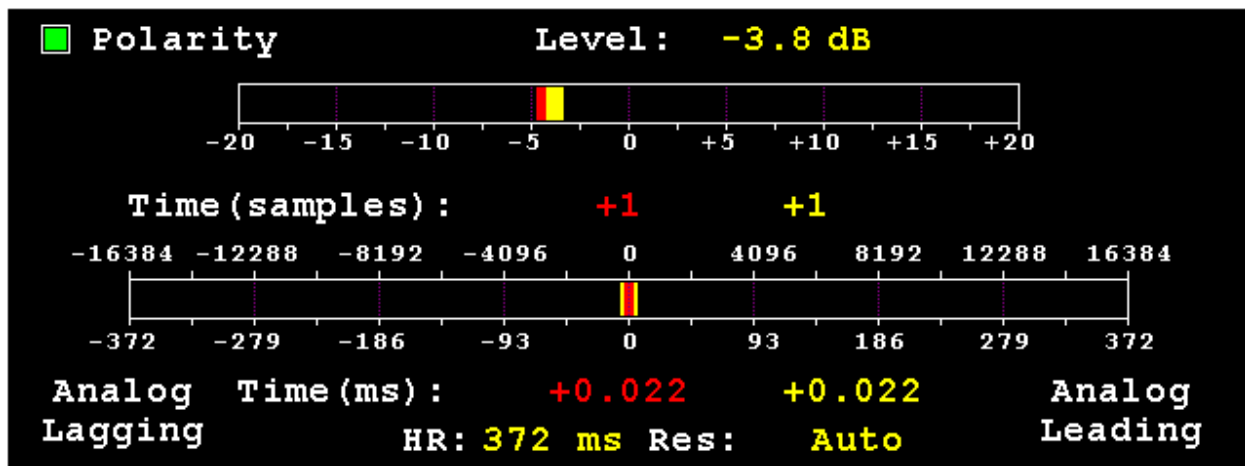


The level/time align screen displays continuous realtime level and time alignment measurements with the red indicator being a fast representation and the yellow being a slower average value.

Polarity: Indicates if Analog and HD signals are in phase(green) or 180 out of phase(red).

HR: Determines the resolution of the time alignment scale.

Res: The sample resolution of the time alignment measurement. The sample resolution is normally set to 1, but can be expanded out to 8 for a wider time window. Larger time windows and sample resolutions result in longer correlation times. Auto works with the ADC software module to automatically scale the window based on the delay error.

5. TIME ALIGN STATUS SCREEN

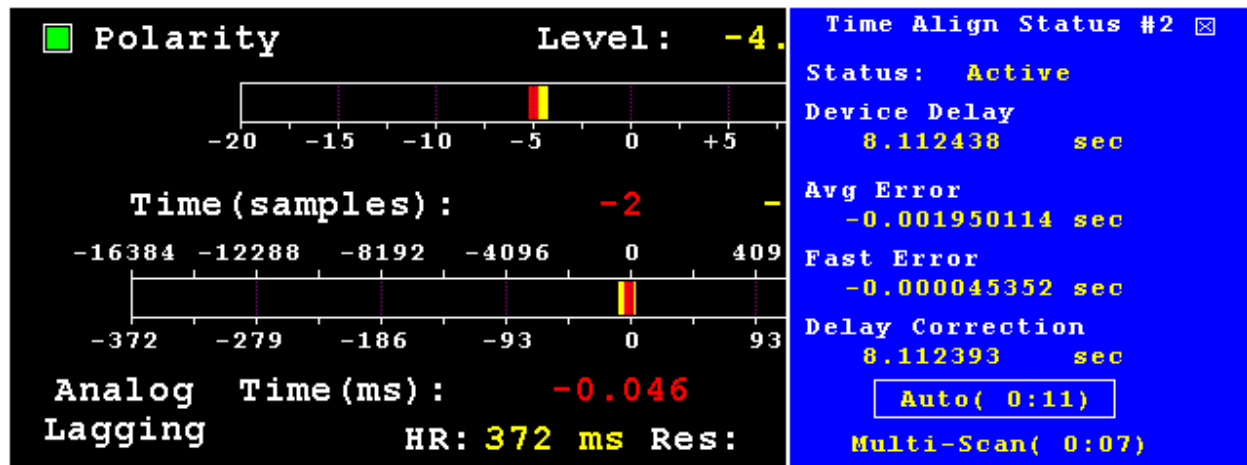

Active Configuration : The number displayed in the upper right hand corner is the current active configuration.

Status: Displays the status of the active configuration

Device Delay: When available, the current delay read from the delay device.

Avg Error: The average error calculated in seconds.


Fast Error: The fast error calculated in seconds.

Delay Correction: This is the current delay correction which will be sent to the delay device.

Update Device/Auto/Ramp Button: In Manual Mode clicking the “Update Device” button will send the current delay correction to the delay device. In Auto Mode the button displays the count down timer until the next correction is automatically sent, this can be forced at any time by clicking on the Auto button.

Multi-Scan: The Multi-Scan count down timer shows how much time is left on this current configuration, before it switches to the next configuration. See the Multi-Scan screen for settings.

6. TIME ALIGN MULTI-SCAN SCREEN

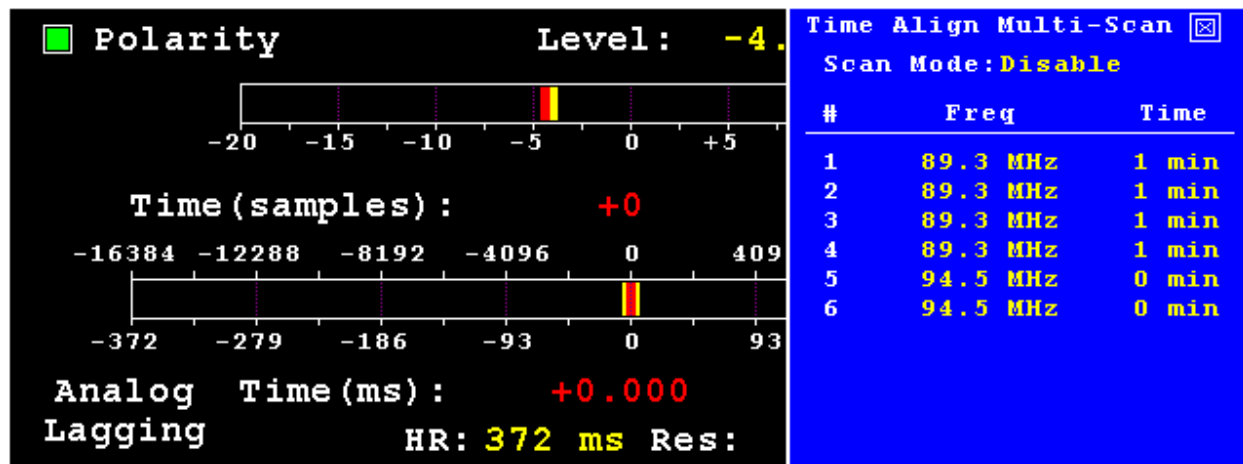


Sscan Mode : Enables/Disables Multi-Scan mode

Freq: Set's tuning frequency for each configuration. These frequencies are used even if the Multi-Scan function isn't enabled.

Time: Determines the time-slot length for a station configuration in Multi-Scan mode. Setting the time to zero will skip the station when Multi-Scan is enabled.

7. TIME ALIGN CONFIGURATION SCREEN

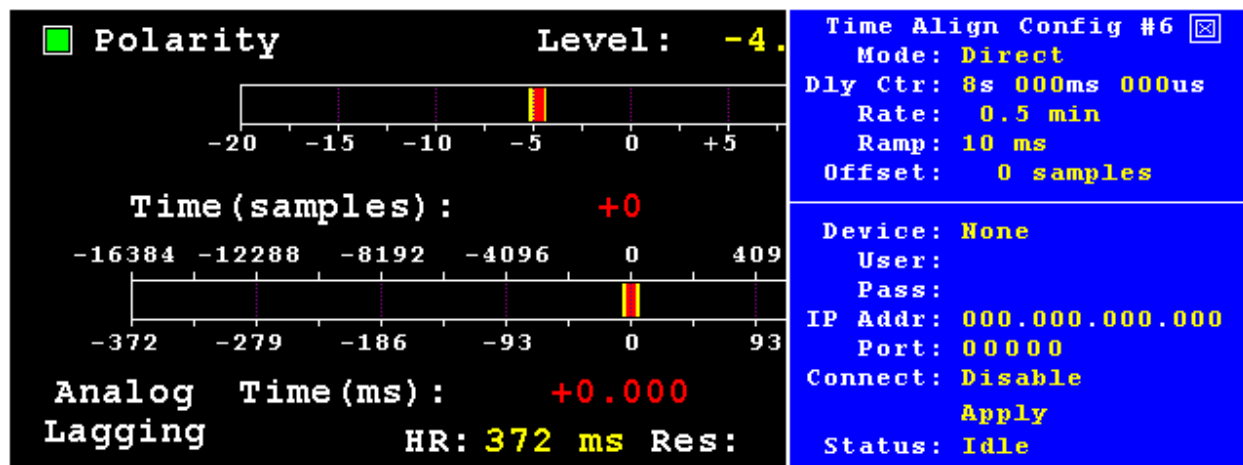

Mode: Direct, Manual and Auto. Determines how the delay device's internal delay is updated by the FMHD-1. In Direct Mode the delay can be adjusted by changing the Dly Ctr, this is useful for setting the initial delay setting in the delay device. Manual mode requires the user click on the Update Device button to send corrections. Auto sends corrections automatically at time intervals defined by the Rate setting.

Dly Ctr: The nominal delay required in the delay device for time alignment. The ADC algorithm calculates delay corrections around this center, plus or minus. If delay corrections are outside the correction window a "Dly Ctr Err" is shown.

Rate: The rate at which delay corrections will be sent to the delay device when Mode is set to Auto.

Ramp: Delay devices which jump directly to new delay settings can be ramped to that new setting in the steps. This is ramp step size, setting the value to 0 ms disables the ramping function.

Offset: This function is currently disabled.

Device : Delay Device hardware selection.

User: Delay Device Username if required.

Pass: Delay Device Password if required

IP Addr: Delay Device IP Address.


Port: Delay Device IP port.

Connect: Enable or Disable IP connection to Delay Device.

Apply: To select this configuration as the active configuration click the Apply button. If a configuration parameter is changed which requires an Apply, the button will turn green.

Status: Displays the status of the Apply process.

8. GATES AIR EXPORTER: UDP HDE-200 & FMXI

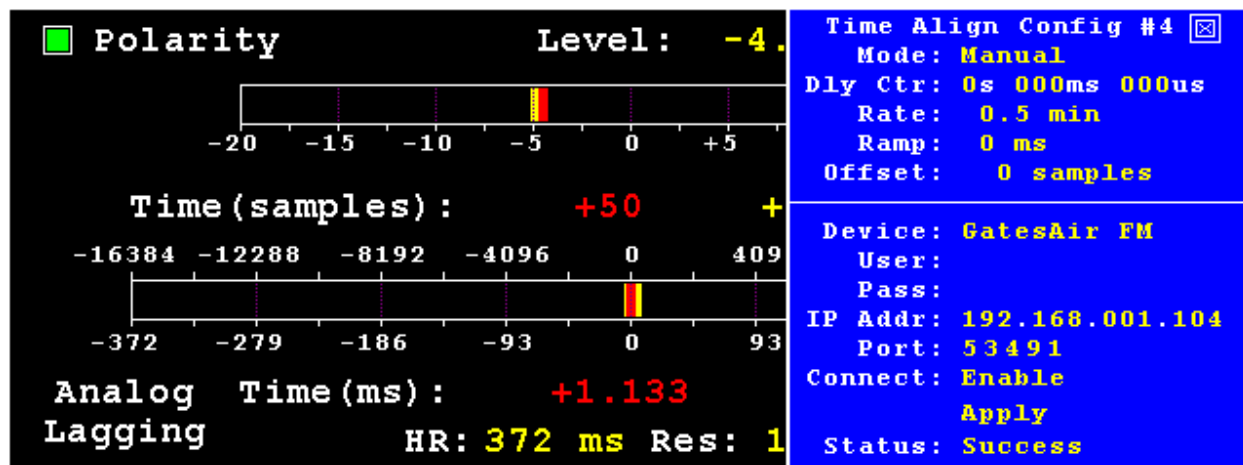

Modes Supported: Manual and Auto only. If this is the initial setup use the Manual setting.

Delay Center: **Must be set to 0.000000 sec.** The HDE-200 only accepts incremental delay corrections and not the total delay in seconds. Corrections will be positive and negative increments.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: **Should be set to 0 ms, which disables the ramping function in the FMHD-1.** The exporter has an internal ramping function which should be used.

Offset: N/A

Devices Supported : HDE 200 Exporter and FMXi. There are two device selections GatesAir FM when using the delay for Analog correction and GatesAir HD when looping the HD1 thru for correction.

User: N/A


Pass: N/A

IP Address: CPU IP Address which can be found on the Address Configuration Utility screen of the HDE-200 Control Center Software supplied with the Exporter.

Port: Default 53491. This information is located on the Diversity Settings screen of the HDE-200 Control Center Software. The External Correction Enable box must be checked on this screen for the exporter to accept corrections from the FMHD-1.

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.

9. GATES AIR EXPORTER: FMXI

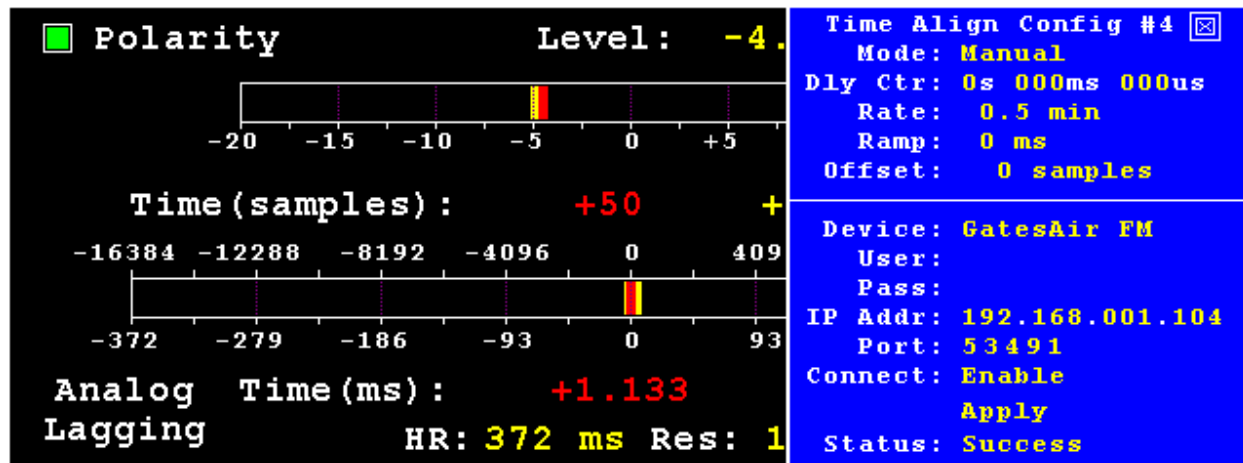

Modes Supported: Manual and Auto only. If this is the initial setup use the Manual setting.

Delay Center: **Must be set to 0.000000 sec.** The HDE-200 only accepts incremental delay corrections and not the total delay in seconds. Corrections will be positive and negative increments.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: **Should be set to 0 ms, which disables the ramping function in the FMHD-1.** The exporter has an internal ramping function which should be used.

Offset: N/A

Devices Supported : FMXi. There are two device selections Universal FM when using the delay for Analog correction and Universal HD when looping the HD1 thru for correction.

User: N/A


Pass: N/A

IP Address: FMXi Exporter IP Address.

Port: Default 49500. This information is located on the DTAC Settings screen of the Flexiva Control Software.

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.

10. NAUTEL EXPORTER

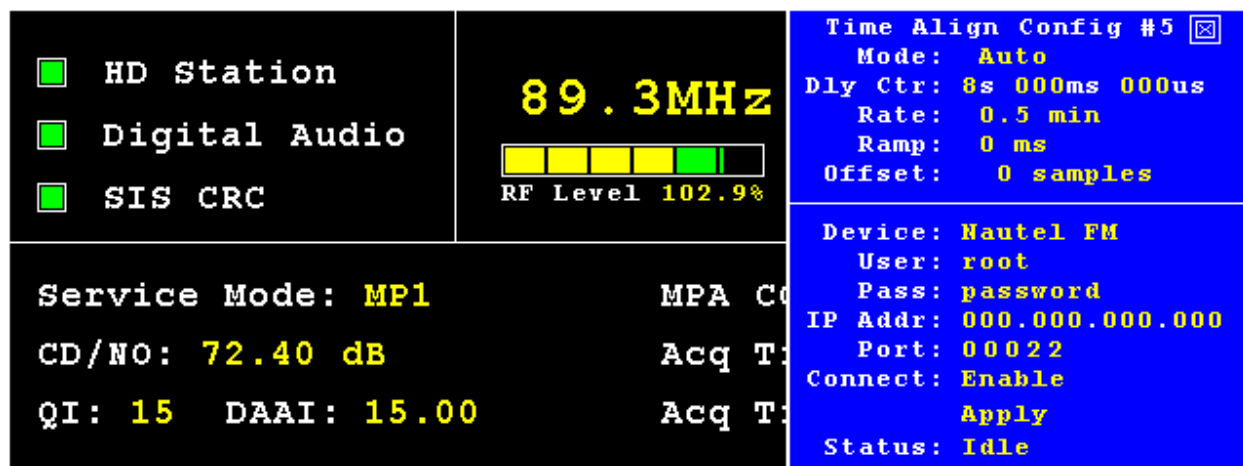

In order for the Nautel Exporter Plus to accept remote delay corrections you must contact Nautel customer service and get a Remote Configuration License.

The ramp function in the exporter should be set to “ramp down”

The FMHD-1 embedded Lantronix device must be updated to version Lantronix 5_2_0_5_B15 using the WizWin software

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the exporter that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Should be set to 0 ms, which disables the ramping function in the FMHD-1. The exporter has an internal ramping function which should be used.

Offset: N/A

Devices Supported : Nautel Exporter Plus. There are two device selections Nautel FM when using the delay for Analog correction and Nautel HD when looping the HD1 thru for correction.

User: Username for exporter login, should be set to “root”


Password: Password for login, can be up to 12 characters, default is ”password”.

IP Address: Exporter IP address

Port: Default 22.

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.

11. OMNIA.6 PROCESSOR

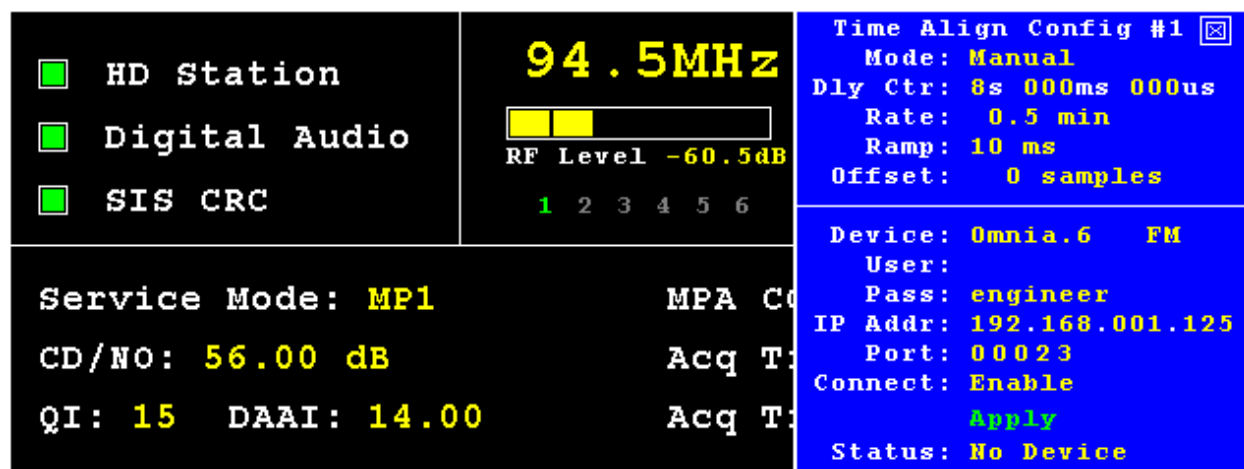

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the Omnia that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Default is 10 ms. This determines the step size of the delay correction the FMHD-1 will apply to the processor during ramping. Example, if the total delay correction was 100ms the FMHD-1 would ramp to that delay in 10 steps of 10 ms each. This reduces an audible jump to a new delay setting by ramping in small steps.

Offset: N/A

Devices Supported : Omnia 6.

User: N/A


Password: engineer

IP Address: This can be found on the front panel of the Omnia processor under System Config IP Configuration.

Port: Default 23

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply

12. OMNIA.7.9 PROCESSORS

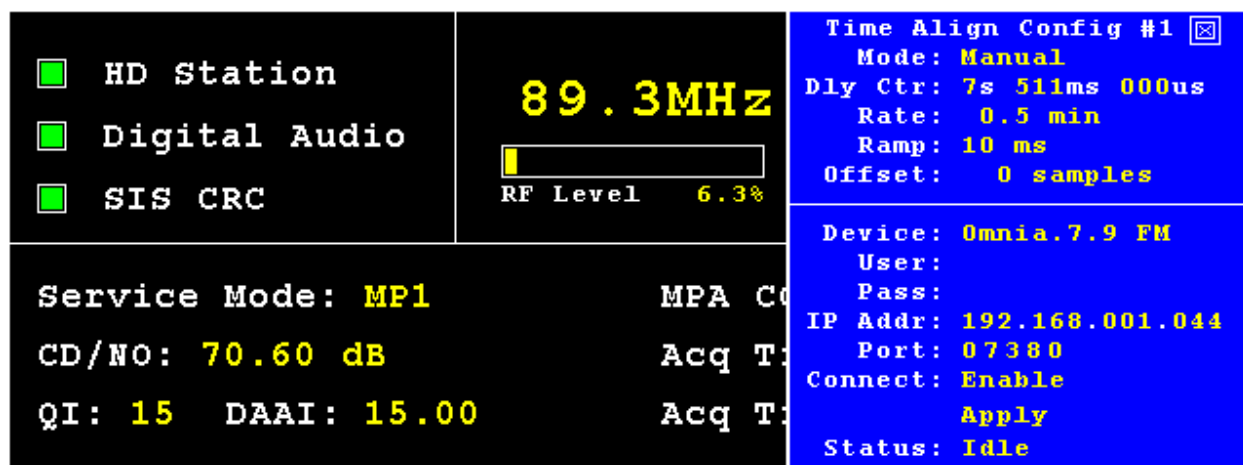

In order for the Omnia processor to accept remote delay corrections you must white list the IP address of Belar FMHD-1 using Omnia NfRemote application.

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the Omnia that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Default is 10 ms. This determines the step size of the delay correction the FMHD-1 will apply to the processor during ramping. Example, if the total delay correction was 100ms the FMHD-1 would ramp to that delay in 10 steps of 10 ms each. This reduces an audible jump to a new delay setting by ramping in small steps.

Offset: N/A

Devices Supported : Omnia 7 and Omnia 9. These processors have separate internal delay lines for the analog and HD1 paths. There are two device selections Omnia FM which applies the correction to Analog Main and Omnia HD which corrects the HD1 delay.

User: N/A


Password: N/A

IP Address: This can be found on the front panel of the Omnia processor under System Config IP Configuration.

Port: Default 7380

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.

13. OMNIA.9 PROCESSOR: CROSS FEED

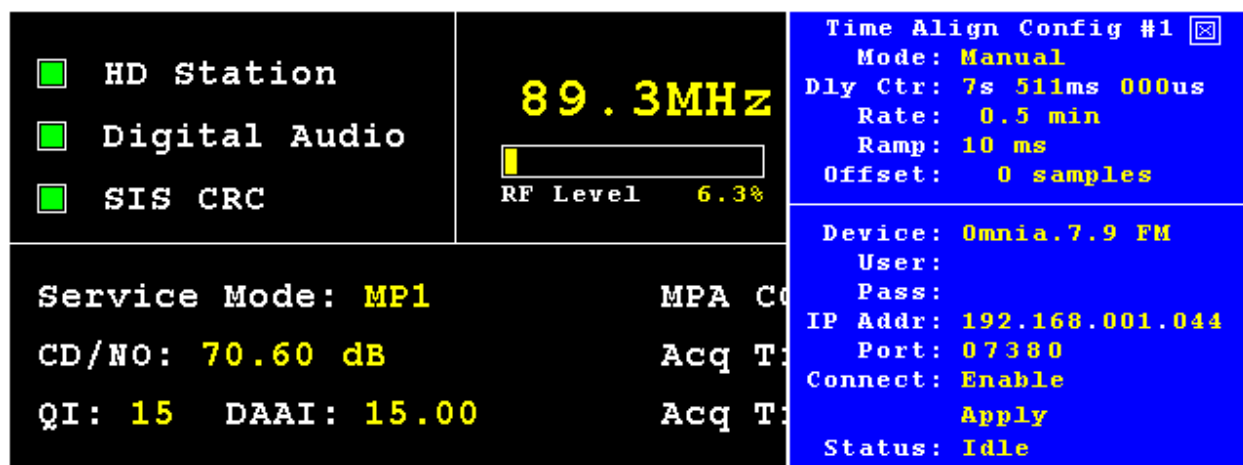

In order for the Omnia processor to accept remote delay corrections you must white list the IP address of Belar FMHD-1 using Omnia NfRemote application.

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the Omnia that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Default is 10 ms. This determines the step size of the delay correction the FMHD-1 will apply to the processor during ramping. Example, if the total delay correction was 100ms the FMHD-1 would ramp to that delay in 10 steps of 10 ms each. This reduces an audible jump to a new delay setting by ramping in small steps.

Offset: N/A

Devices Supported : Omnia 9 Cross Feed Mode. In Cross Feed mode the diversity delay controls are not used and should be set to zero for the Analog FM and HD1. Instead the Output Delay controls are adjusted to sync the Analog MPX and HD1 audio. These processors have separate output delay lines for the analog MPX and HD1 paths. There are two device selections Omnia FM which applies the correction to Analog MPX output delay and Omnia HD which corrects the HD1 output delay.

User: N/A


Password: N/A

IP Address: This can be found on the front panel of the Omnia processor under System Config IP Configuration.

Port: Default 7380

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.

14. OMNIA.11 PROCESSOR

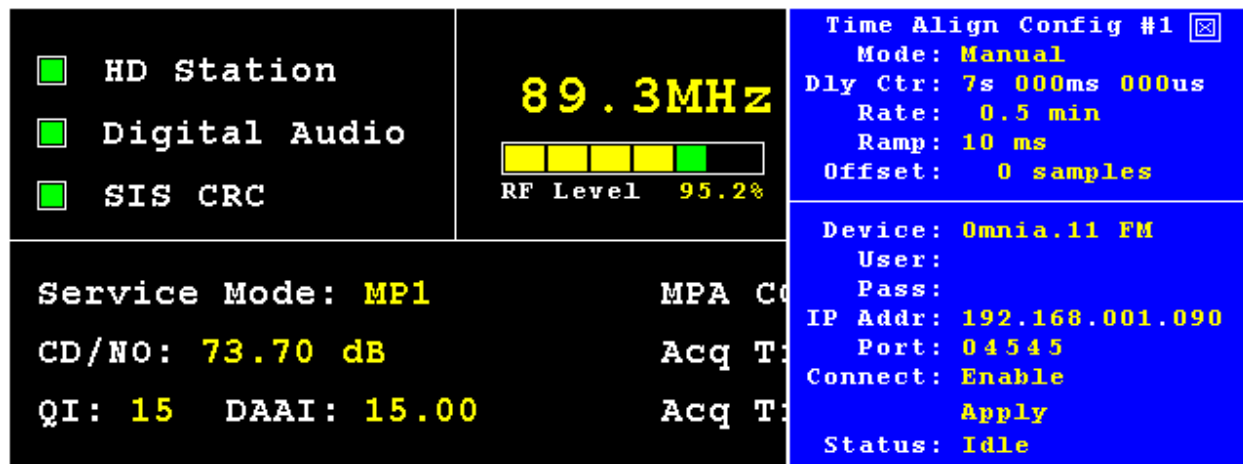

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the Omnia that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Default is 10 ms. This determines the step size of the delay correction the FMHD-1 will apply to the processor during ramping. Example, if the total delay correction was 100ms the FMHD-1 would ramp to that delay in 10 steps of 10 ms each. This reduces an audible jump to a new delay setting by ramping in small steps.

Offset: N/A

Devices Supported : Omnia 11.

User: N/A


Password: N/A

IP Address: This can be found on the front panel of the Omnia processor under System Config IP Configuration.

Port: Default 4545

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status

15. ORBAN PROCESSORS

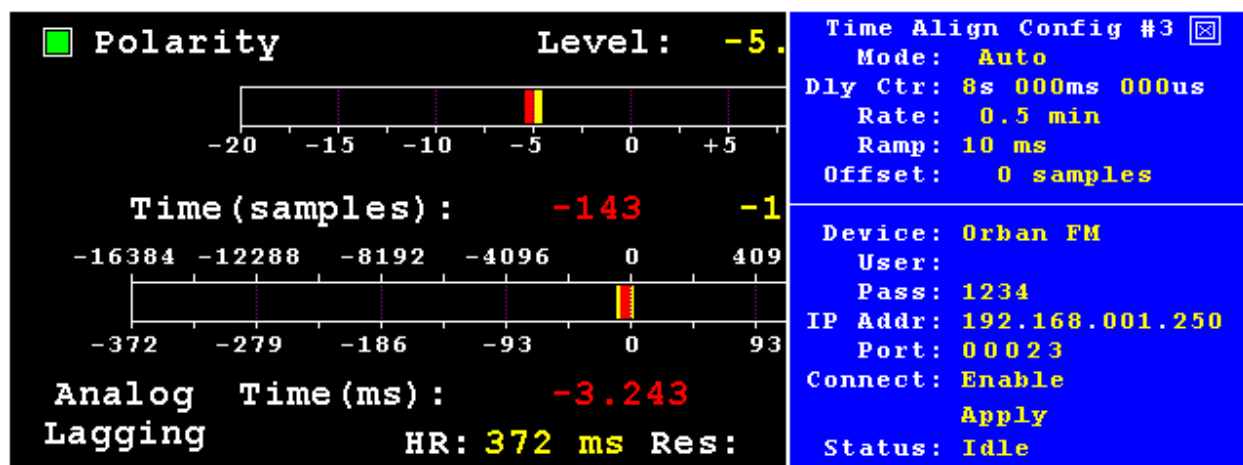

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the Orban that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Default is 10 ms. This determines the step size of the delay correction the FMHD-1 will apply to the processor during ramping. Example, if the total delay correction was 100ms the FMHD-1 would ramp to that delay in 10 steps of 10 ms each. This reduces an audible jump to a new delay setting by ramping in small steps.

Offset: N/A

Devices Supported : Orban 5500, 5700, 8500, 8500S, 8600, 8700 users are advised to upgrade to the latest software version at <ftp.orban.com>. For 8600/8700 processors the Diversity Delay Mode must be set to FM & HD, if set to FM Only the delay won't update.

User: N/A


Password: You must set a 4 digit numeric password which can be configured in the processor, please set or check the password on the processor and enter the digits in the first 4 characters.

IP Address: This is the processors IP address.

Port: Default 23

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.

16. WHEATSTONE PROCESSORS

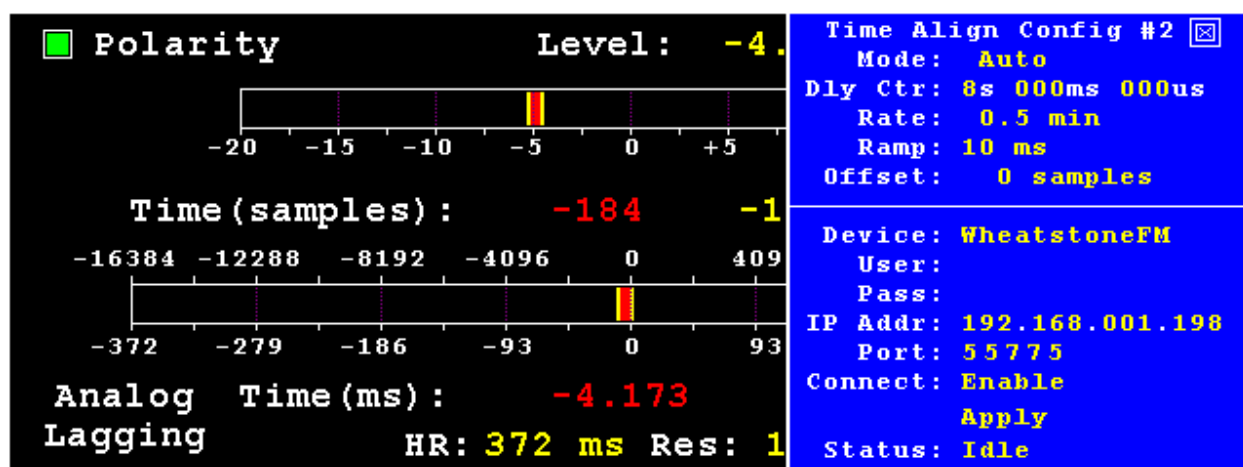

Modes Supported: Direct, Manual and Auto. If this is the initial setup use the Manual setting.

Delay Center: This should be set to your nominal or average delay in the Wheatstone that is being corrected.

Rate: All update rates are available, this parameter only applies when Mode is set to Auto.

Ramp: Default is 10 ms. This determines the step size of the delay correction the FMHD-1 will apply to the processor during ramping. Example, if the total delay correction was 100ms the FMHD-1 would ramp to that delay in 10 steps of 10 ms each. This reduces an audible jump to a new delay setting by ramping in small steps.

Offset: N/A

Devices Supported : Wheatstone AirAuraX3, FM-531HD, VP-8ip and FM-55

User: N/A

Password: N/A

IP Address: This is the processors IP address.

Port: Default 55775

Connect: Enable, select and click on the green Apply to initiate the connection with the exporter, the Status will change to Configuring, and indicate Success or Failure. If the Apply fails check the above settings and re-try. If the Apply was successful see the FMHD-1 Time Align Status screen for realtime status.



BELAR

ELECTRONICS LABORATORY, INC.

P.O. BOX 1299
COLUMBA CA 95310 USA
VOICE (610) 687-5550 • FAX (610) 687-2686

www.belar.com
sales@belar.com
service@belar.com